


Setting up your Brush Cutter is most important! Never walk behind when mower is operating. Keep front deck slightly higher than the rear. Mower will sink in grass about 2", so adjust accordingly. When you are unfamiliar with the area your cutting, play it safe and mow 8" higher than normal. Then you can see to remove dangerous objects for your next mowing.

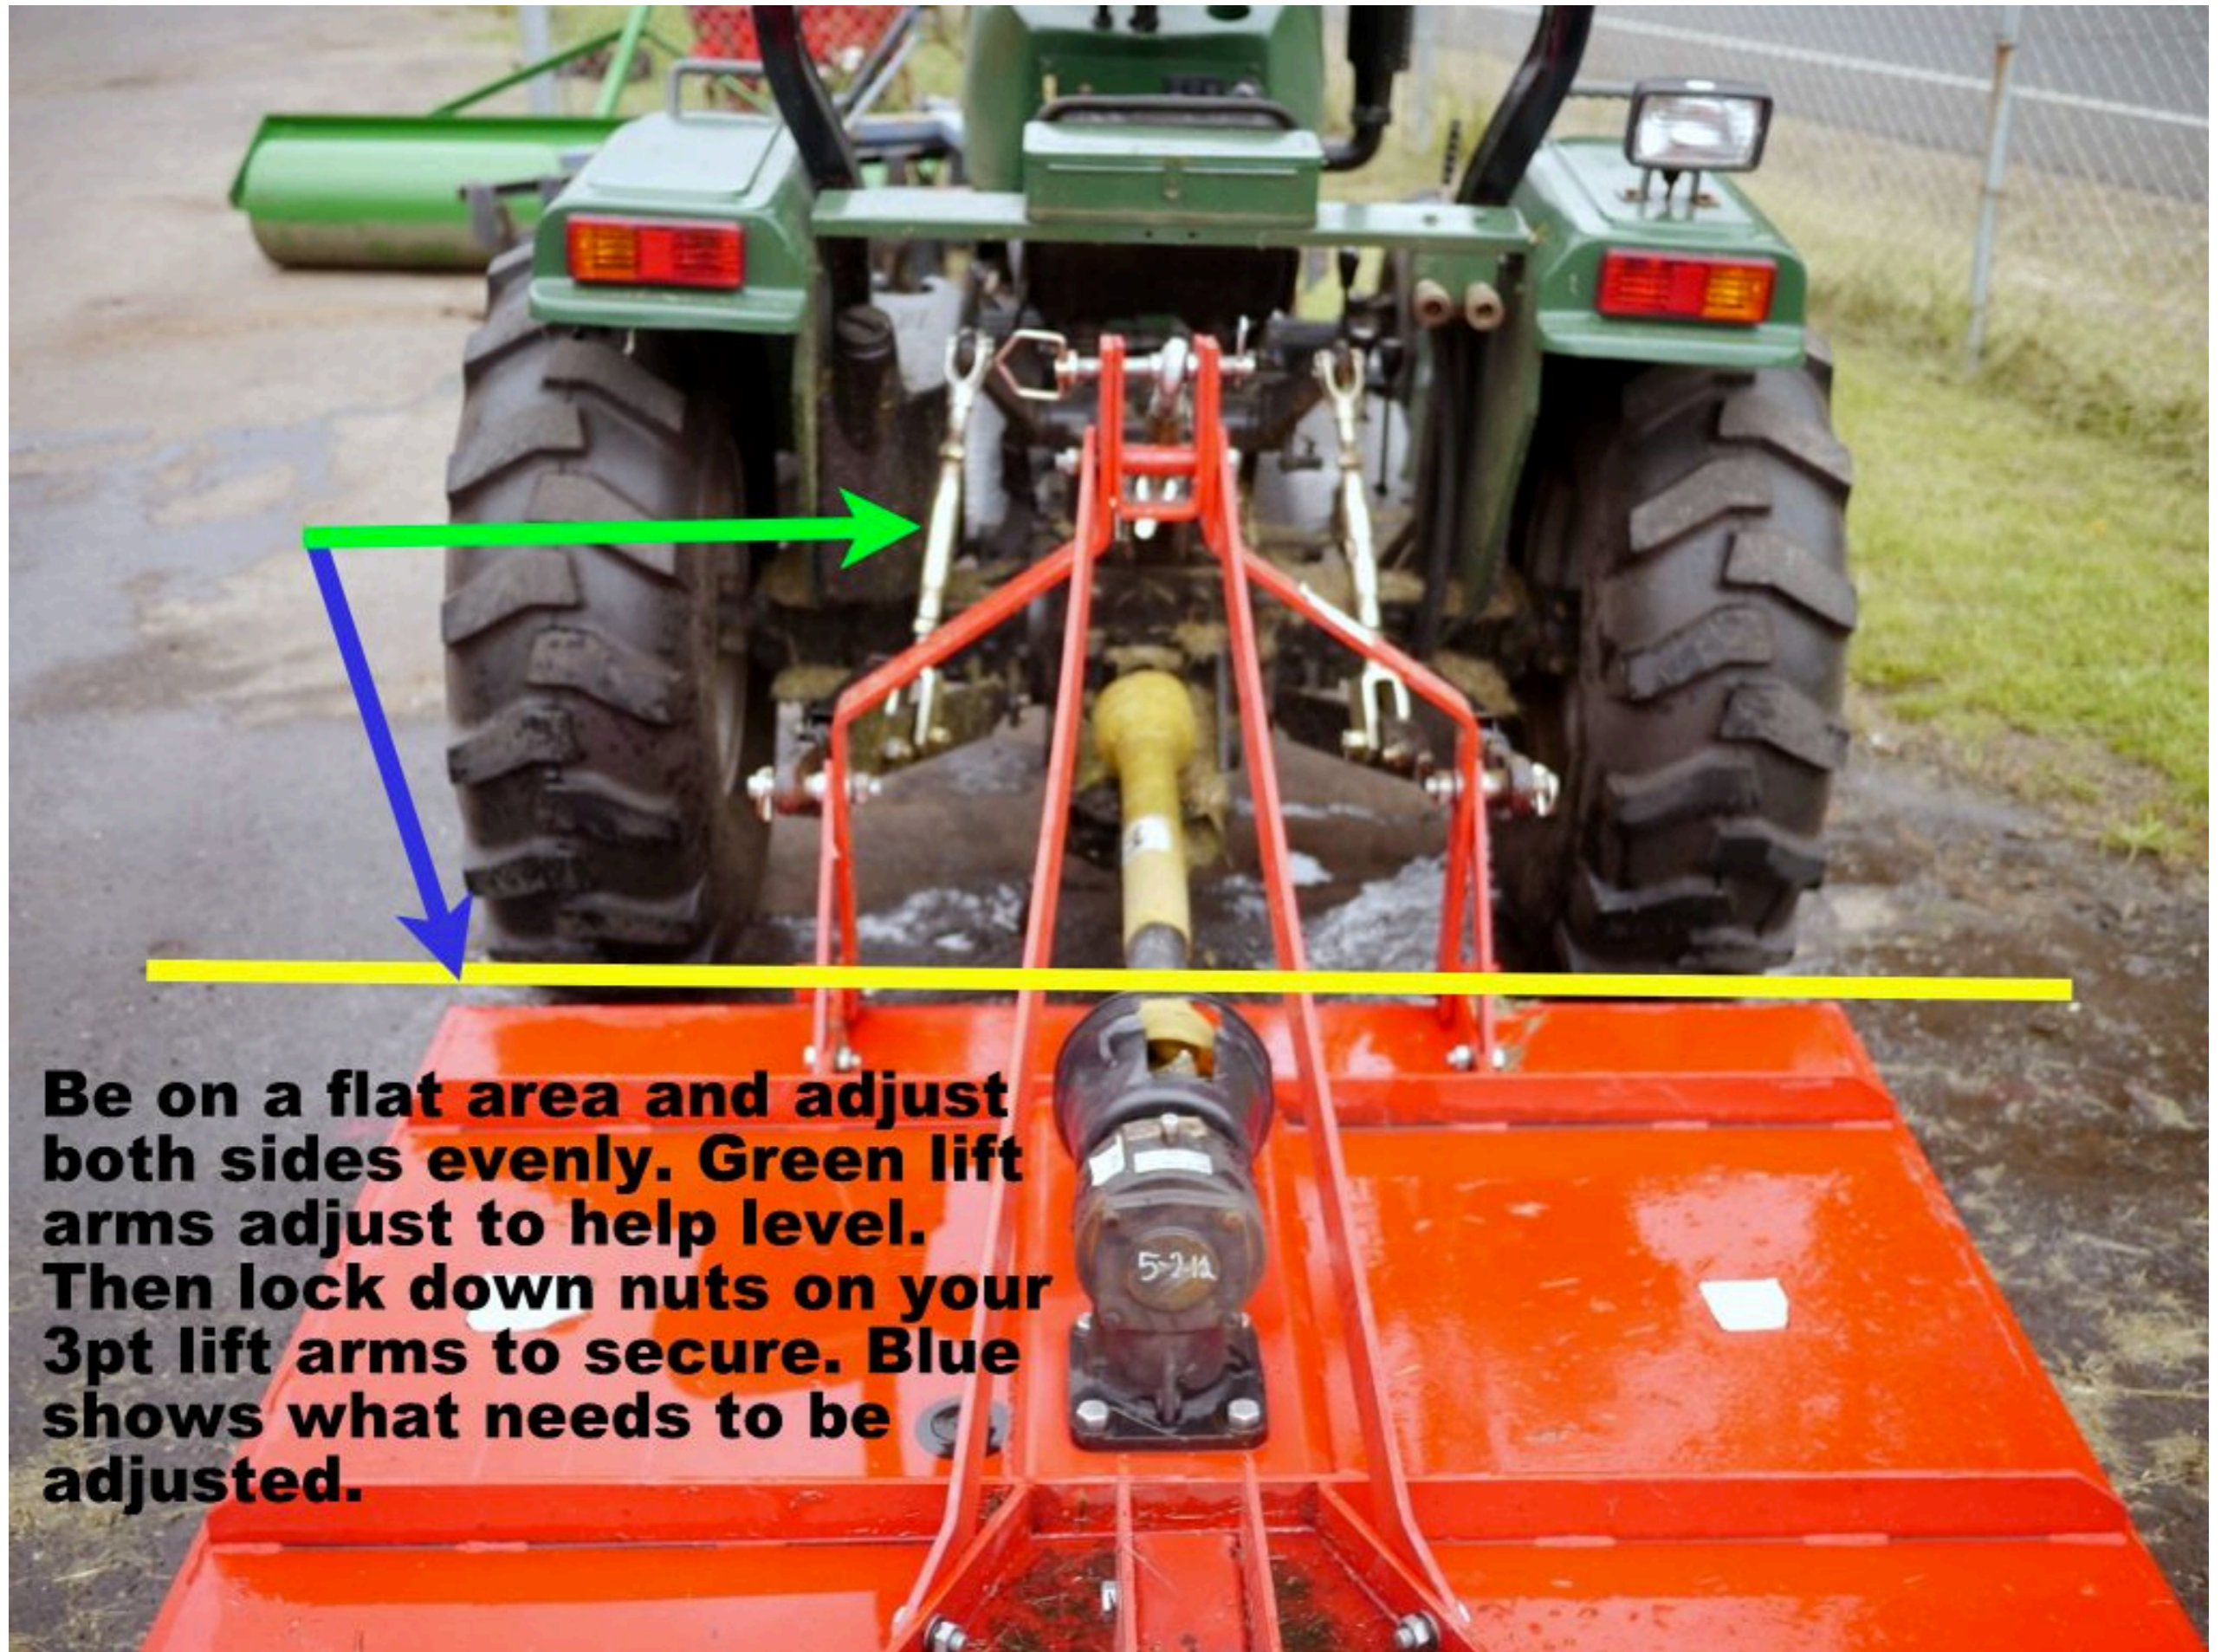



Be on a flat area and adjust both sides evenly. Green lift arms adjust to help level. Then lock down nuts on your 3pt lift arms to secure. Blue shows what needs to be adjusted.

**Gear Boxes should never be over filled !
Use 80-90W Gear oil. Use grease on
bot ends of the PTO shaft zerks.**

Oil add area



Fill level 50%

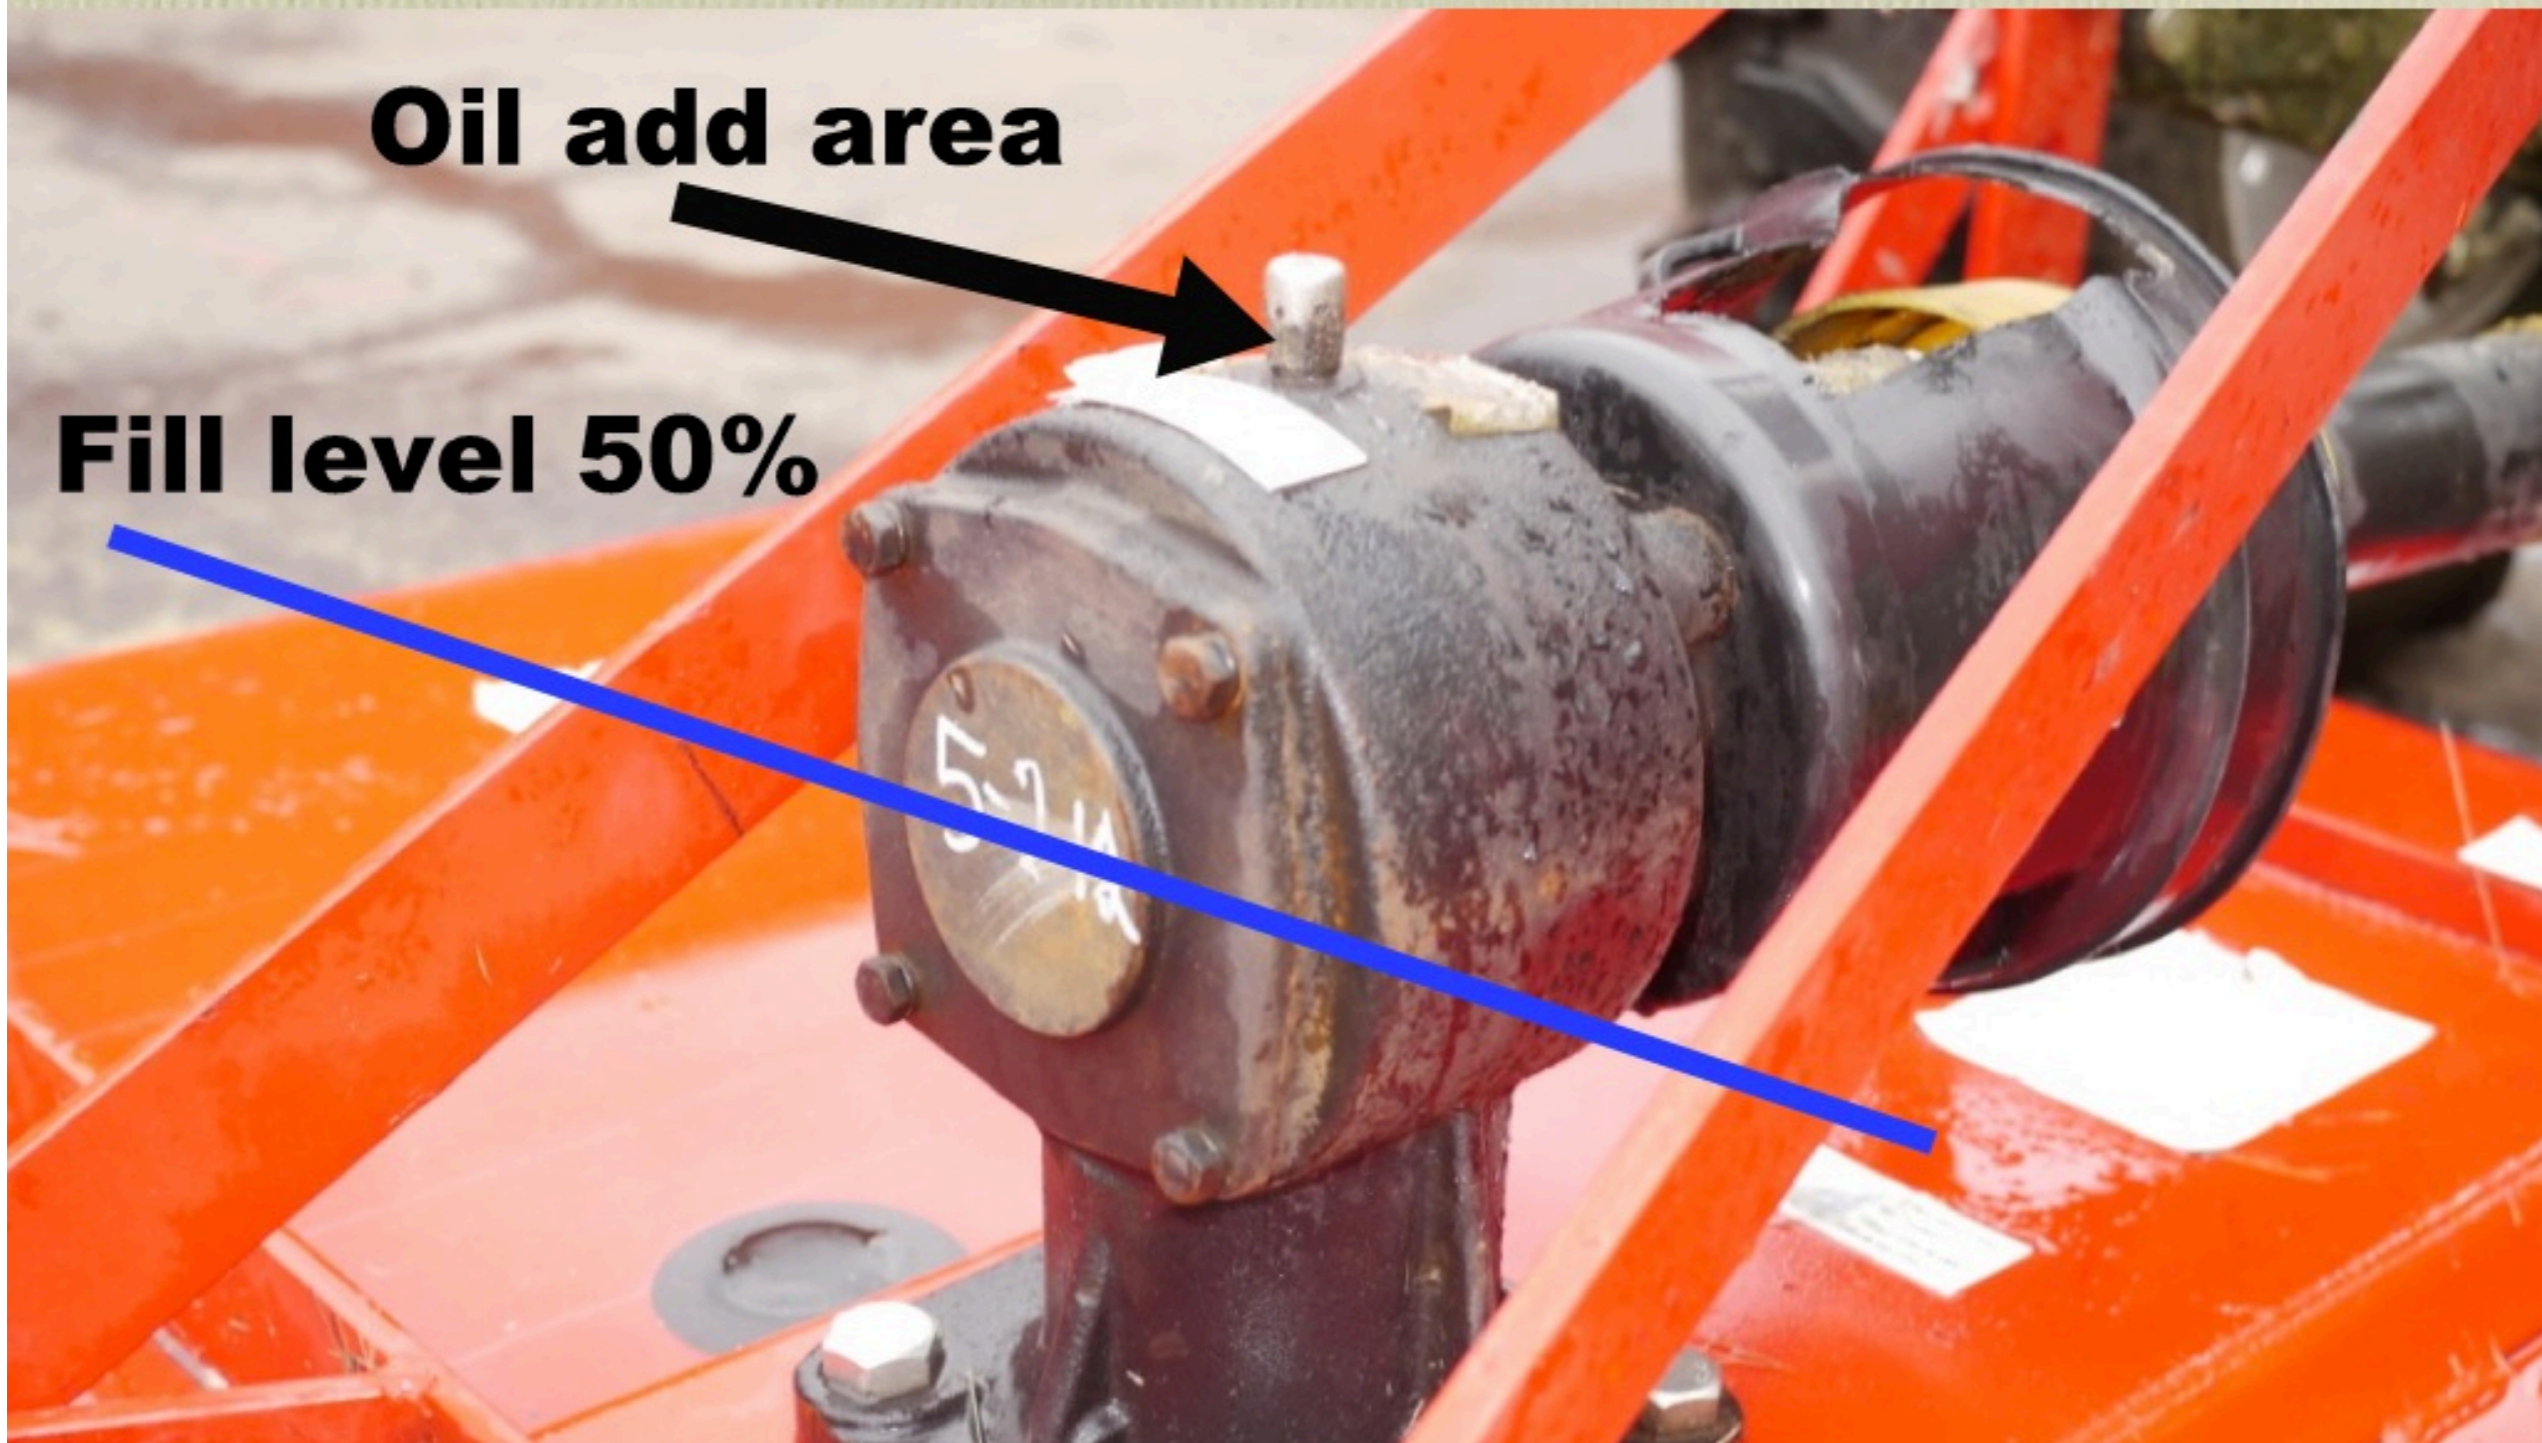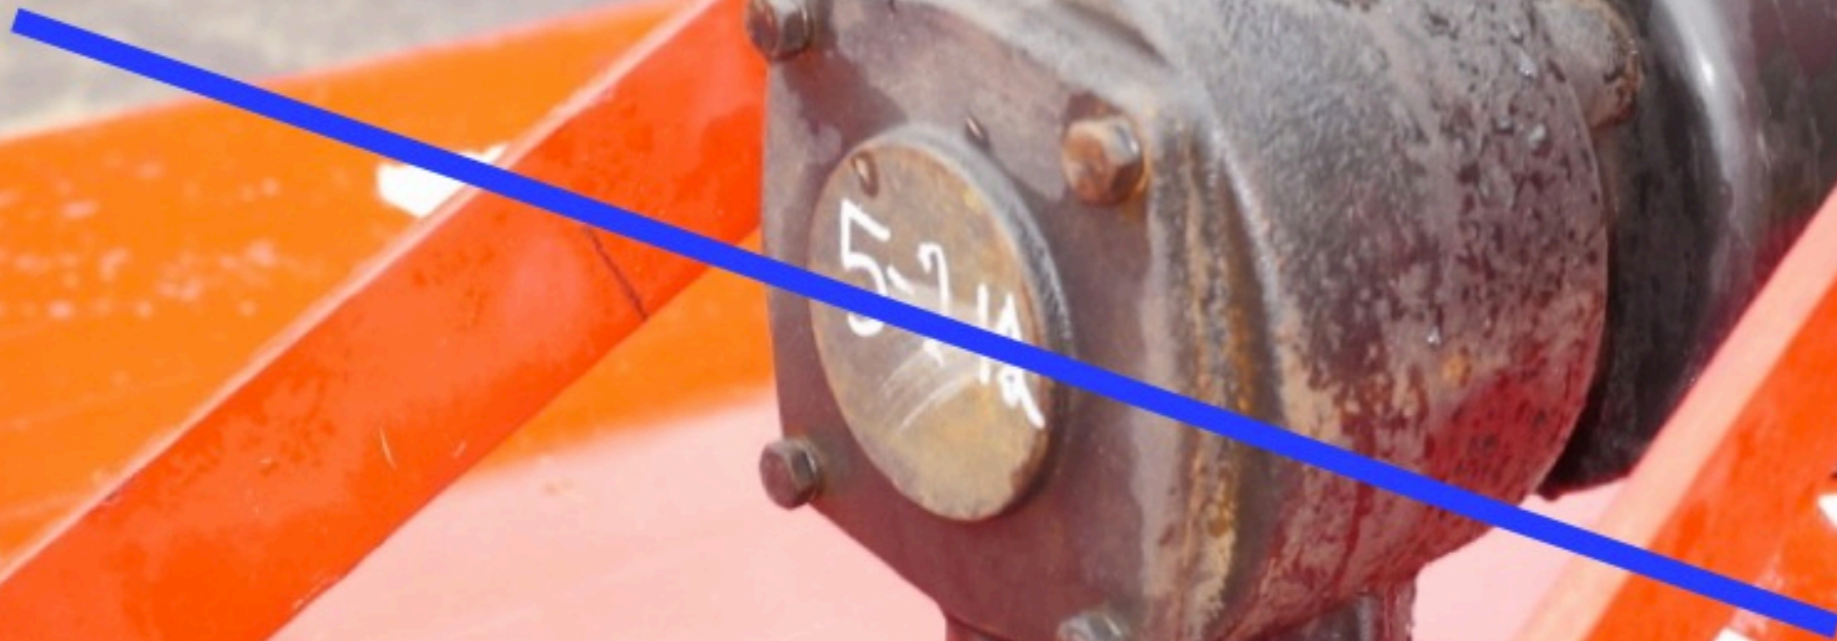


*** Do not push so hard that you break seals**



**Grease
often
Zerk**

**Grease Often
Axle**

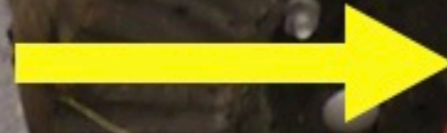

Once the mowing deck level is set, set the top link and lock with supplied (white or a nut) Screw nut or (white) to grip against where blue pointers touch.



**Do NOT lift your mower too high.
DANGEROUS !**

**3' can be danger
PTO can hit mower deck
See Yellow arrow**

2'

1'

**Do not raise wheel off ground more then 2'. We suggest 1'.
Set tractor 3pt settings to keep within safe range.....
Green line is surface level or grass.**

TYTAN

Tytan Dealership's are now available